
FL-X


Assembly Guide





Components

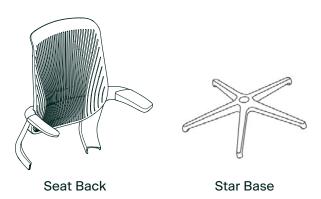

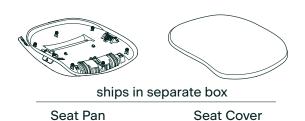



Optional Component

Drafting Ring Lift Extension (separate box)




Tools Required

5mm Allen Key

Installation Notes

- Please read the assembly instruction sheet completely before assembly.
- Remove all parts from carton and check that all parts are included prior to assembly.
- Assemble the chair on the carton or table to prevent scratching the chair.
- Please be mindful of the weight of chair to avoid injury.
- Do not use power tools.
- Examine all packaging material and remove staples before discarding carton.
- The parts of the product may be slightly different from the drawings shown.
- For assistance, contact Customer Care at (877) 801-0370

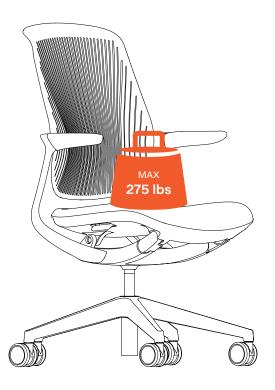




Installation


Step 1 Frame Assembly

- 1. Select a smooth surface in order not to scratch the parts.
- 2. Attach the back to the seat pan with the 4 bolts (2 per side).
- 3. Insert the seat cushion into the seat pan.
- 4. Press down firmly on all 6 bolt pressure points to securely attach.

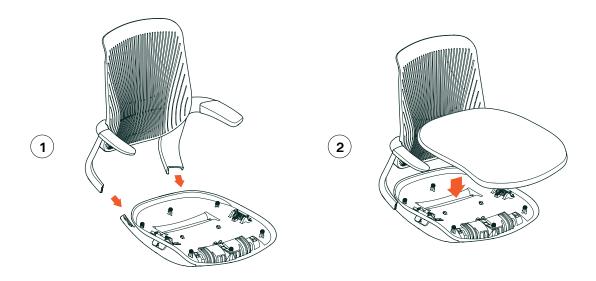

Step 2 Castors, Star Base and Gas Lift Assembly


- 1. Select a smooth surface in order not to scratch the parts.
- 2. Turn the star base upside down and press castors into holes at the end of each leg.
- 3. Turn the star base upright and insert the gas lift into the center hole of star base.

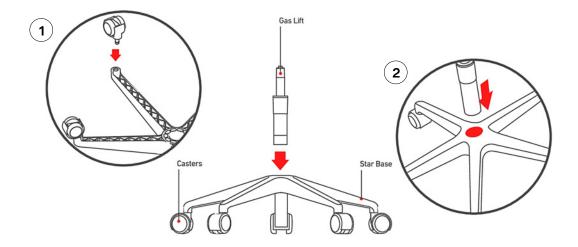

Installation

Step 3 Final Assembly

- 1. Combine the upper part of the chair with the already assembled bottom part.
- 2. If drafting ring is included, see below instructions before proceeding with this step. Fix the cylinder to the hole located below the upper part of the chair.
- 3. After installing the cylinder, sit on the chair and check if the chair height adjustment lever is fully functional.

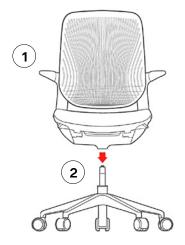

Optional Drafting Ring Lift Extension

- 1. Insert cylinder into ring. Tighten with knob.
- 2. Slide the cylinder into the 5-star base.

